CARSON

LEDFlashlight

LED Lighted Flashlight with Hook and Stand

Congratulations on selecting your new LED Lighted Flashlight! In order to achieve optimum performance, please follow instructions for proper use.

PRODUCT SPECIFICATION

Weight:	0.05 lbs	Batteries: 3 AAA (not included)
Dimensions:	1.9" x 0.6" x 3.3"	




INSERTING BATTERIES

1. Use small slot to lift and remove battery door.



2. Insert three AAA battery following the polarity indicator marked inside the battery compartment, then reattach door.

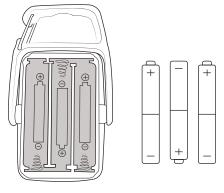

WARNING

Use only alkaline batteries. Mixing old and new, different brands or types within brands may cause batteries to leak, overheat or explode. Keep away from fire or excessive heat. Inspect batteries for corrosion or leakage. Insert in direction indicated. Rechargeable batteries not recommended.

USING FLASHLIGHT

- Press button to turn ON.
- 2. Press again to switch to high mode.
- 3. Press a third time to switch to strobe, which can be used in emergency situations.
- 4. Press again to turn light off.
- 5. Press and hold button for 2 seconds to activate red light at any point in mode cycle.
- 6. Press button to turn red light OFF.



Customer Service: If you experience any difficulties, please contact us and we will be happy to help you. For warranty information, visit www.carson.com/warranty







□ uksupport@carson.com

□ eusupport@carson.com

www.carson.com

Carson Optical 2070 5th Avenue, Ronkonkoma, NY 11779 631-963-5000

