
## **CARSON**

# **PAGEGLOW™**


LED LIGHTED BOOKLIGHT

### Instructions for Use:


Remove gray battery door by lifting it up and away from handle (Fig. 1).

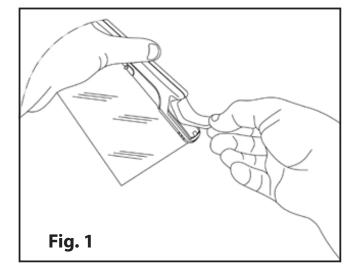

Insert 3 AAA batteries and replace battery door (Fig. 2). Make sure to follow polarity indicators marked on product.

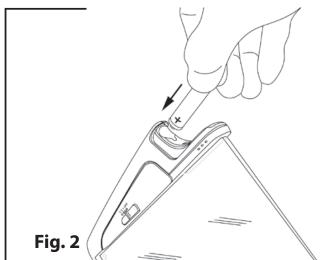


Select desired brightness using 3 stage dimming switch (Fig. 3). Place clear acrylic portion of item directly on reading material.

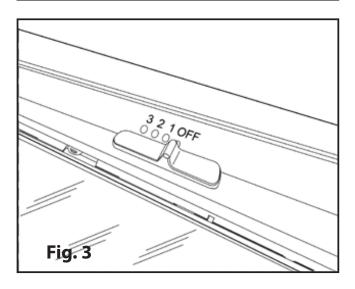

#### **Instructions for Use (continued)**

To use hands-free, detach clip from bottom portion of handle and attach to the top of handle (Fig. 4-7).

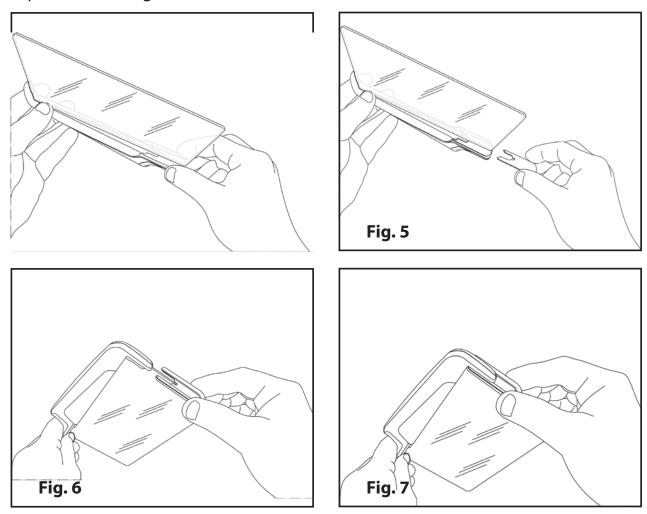

Once lights become noticeably dimmer it is time to replace the batteries.

**Note** - Do not leave batteries installed during extended periods of disuse. Do not mix new and old batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

#### **Customer Service:**

If you experience any difficulties, please contact us and we will be happy to help you.

In the U.S.A. In the U.K. In the E.U.

 Phone:
 1-631-963-5000
 Phone:
 +44 (0) 1938 557440
 Phone:
 +44 (0) 1938 557440

 Email:
 info@carson.com
 Email:
 uksupport@carson.com
 Email:
 eusupport@carson.com