

# CARSON® Emergency Fire Starter

WM-21

## 2.5x Magnifier and 6x Spot Lens


Congratulations on selecting your new Emergency Fire Starter! In order to achieve optimum performance, please follow instructions for proper use and care.



### USING FIRE STARTER

Before using fire starter, make sure you are wearing sunglasses.

1. Gather dry tinder which can include dried grass, shredded bark, dry leaves, and dry pine needles.
2. Shape tinder bundle like a bird's nest. Hold magnifier perpendicular to the sun and focus the beam on single spot (about 7" away) on the center of tinder bundle. Before focusing on a single spot, make sure nothing is in the way of the direct light.
3. Once smoke and embers form, begin to lightly blow on the embers. Be sure not to blow too hard which can extinguish the embers. Be patient as this process can take a few seconds to a few minutes. As the ember grows, continue to feed the ember oxygen until fire ignites. Once fire ignites, add more dry kindling to keep the flame ignited.

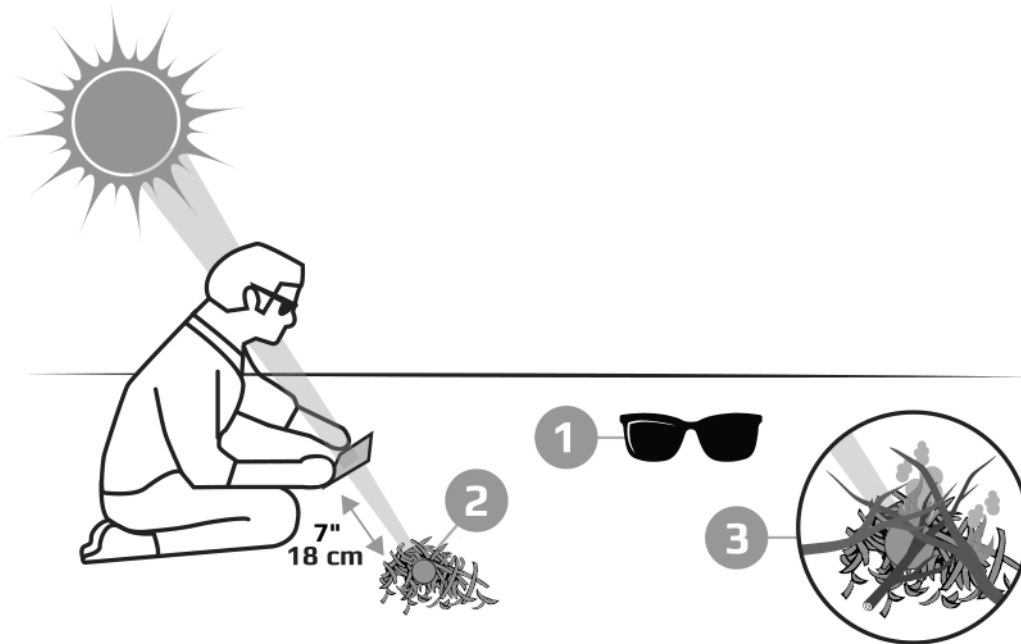

### CAUTION

This magnifier is intended to be used as an emergency fire starter. Keep out of the reach of children.

### Customer Service:

If you experience any difficulties, please contact us and we will be happy to help you.



✉ info@carson.com



✉ uksupport@carson.com



✉ eusupport@carson.com

For warranty information, visit [www.carson.com/warranty](http://www.carson.com/warranty)

[www.carson.com](http://www.carson.com)

Carson Optical 2070 5th Avenue, Ronkonkoma, NY 11779 | Tel: 631-963-5000