

CARSON[®]

MicroPen[™]

MP-300


24x-53x LED Microscope Pen



Congratulations on selecting your new MicroPen! In order to achieve optimum performance, please follow instructions for proper use and care.

USING THE MICROPEN:

1. Place microscope directly on top of object.
2. Slide LED button:
 - Down to turn On
 - Up to turn Off
3. Turn Zoom Wheel to adjust desired magnification.
4. Slide Focusing lever until image is observed.
5. Observe through eyepiece.

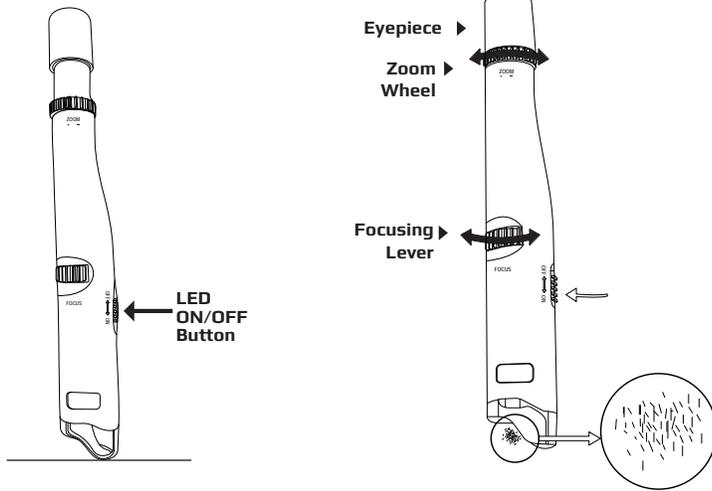

PRODUCT SPECIFICATION:


Magnification:	24x-53x
Batteries:	3 G3 Button Cell Batteries (included)
Weight:	0.7 oz
Dimensions:	0.5" x 0.7" x 5.2"
Illumination:	LED

CARE:


Clean using microfiber lens cloth. Do not use any abrasives, chemical cleaners or solvents.

REPLACING BATTERIES:


1. Unscrew battery door with a screwdriver and remove door in direction shown by arrow below.

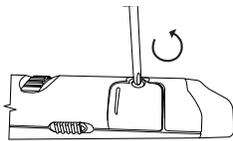

2. Remove used-up batteries and insert 3 new G3 button cells into compartment in the correct polarity.

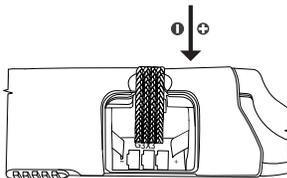

3. Close battery door and tighten with screwdriver.

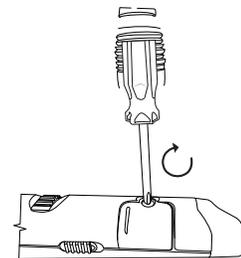

Customer Service: If you experience any difficulties, please contact us and we will be happy to help you.
For warranty information, visit www.carson.com/warranty



✉ info@carson.com



✉ uksupport@carson.com



✉ eusupport@carson.com

www.carson.com

Carson Optical 2070 5th Avenue, Ronkonkoma, NY 11779 | Tel: 631-963-5000