

# CARSON®

## CP-60RPL

# Replacement Lens Set

## for CP-60 Magnifier Deluxe™

Congratulations on selecting your new Carson replacement lens set! In order to achieve optimum performance, please follow instructions for proper use and care.



### PRODUCT SPECIFICATION

Magnification:	1.5x, 2x, 2.5x, 3x
Lens Width:	101.6mm (4")
Weight:	0.04 lbs
Accessories:	Microfiber Cloth and Protective Case


### ATTACHING AND REMOVING LENSES

#### Attaching Lenses:

1. With the flat part of the lens facing inwards, insert lens tabs into slots underneath the visor (curved portion should face out). When it clicks, it's locked in place.

#### Removing Lenses:

1. Carefully pull down lens to remove.
2. Return lens to storage case when not in use.

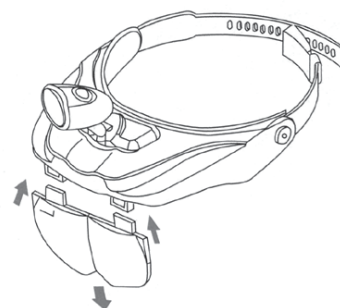

### CLEANING AND CARE

- Clean using microfiber lens cloth. Do not use any abrasives, chemical cleaners, or solvents.
- To avoid scratching, handle lenses with care and store in case when not in use.

#### Customer Service:

If you experience any difficulties, please contact us and we will be happy to help you.



✉ [info@carson.com](mailto:info@carson.com)



✉ [uksupport@carson.com](mailto:uksupport@carson.com)



✉ [eusupport@carson.com](mailto:eusupport@carson.com)

For warranty information, visit [www.carson.com/warranty](http://www.carson.com/warranty)

[www.carson.com](http://www.carson.com)

Carson Optical 2070 5th Avenue, Ronkonkoma, NY 11779 | Tel: 631-963-5000