

# CARSON® PRO

## MagniFlexPro™

### 2x Power 4" LED Lighted Gooseneck Flexible Magnifier with 4x Spot Lens and Magnetic Base

Congratulations on selecting your new MagniFlex Pro! In order to achieve optimum performance, please follow instructions for proper use and care.



#### PRODUCT SPECIFICATION:


Magnification:	2x/4x Spot
Batteries:	4 AA (not included)
Weight:	5.32 lbs
Dimensions:	14.2 x 5.3 x 18.9"
Lens Diameter:	101mm (4")
Accessory:	AC Adapter

#### BATTERY WARNING:


Use only alkaline batteries. Mixing old and new, different brands or types within brands may cause batteries to leak, overheat or explode. Keep away from fire or excessive heat. Inspect batteries for corrosion or leakage. Insert in direction indicated. Rechargeable batteries not recommended.

#### TO CHANGE BATTERIES:

1. Remove battery door. Then remove battery case from compartment.
2. Replace exhausted batteries with 4 fresh AA 1.5V batteries according to polarity indicators printed inside case.

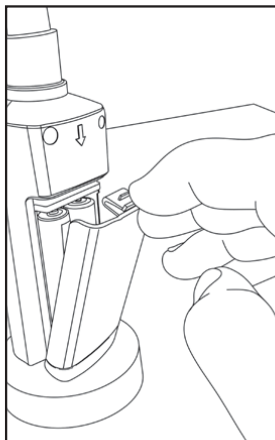


3. Place loaded battery case into battery compartment with metal contacts facing upwards and towards the inside of the battery compartment.
4. Replace battery door.


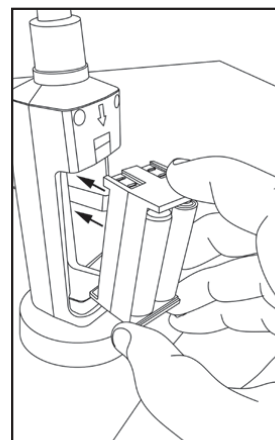


#### INSTRUCTIONS FOR USE:

1. Place metal on stable, flat surface.
2. Attach magnifier to metal plate in desired position using built-in magnet located in magnifier base.

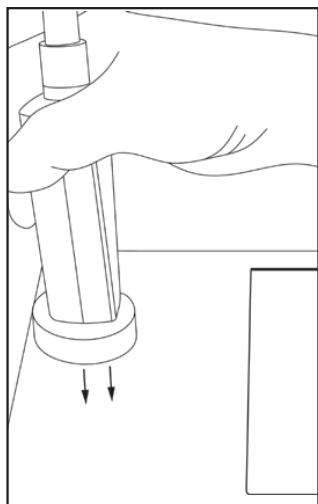


3. To use with table clamp, place open c-clamp onto a table or hard surface and tighten securely by handle. Then place magnifier on top of clamp using built-in magnet located in magnifier base.

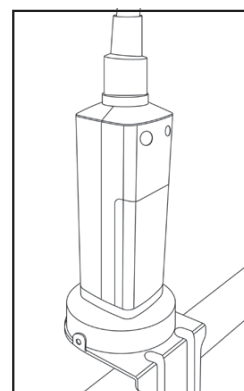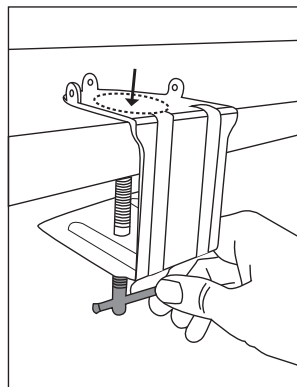


## INSTRUCTIONS FOR USE CONTINUED:

5. To use with battery power, remove the plug from the power jack. The unit will automatically switch to battery power.

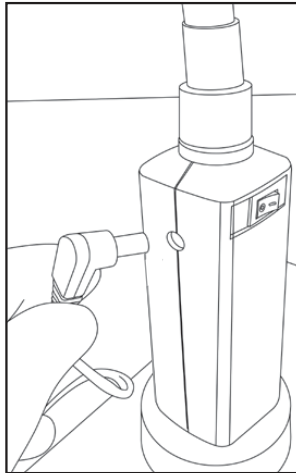

6. Turn on light switch located on the front of the magnifier.

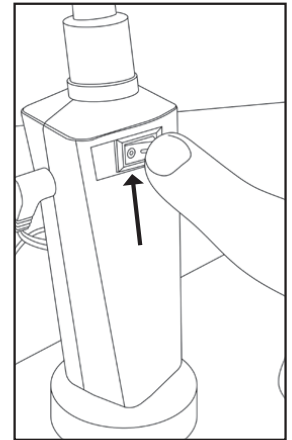

### Customer Service:

If you experience any difficulties, please contact us and we will be happy to help you.



info@carson.com



✉ uksupport@carson.com



✉ eusupport@carson.com

For warranty information, visit [www.carson.com/warranty](http://www.carson.com/warranty)

**[www.carson.com](http://www.carson.com)**

Carson Optical 2070 5th Avenue, Ronkonkoma, NY 11779 | Tel: 631-963-5000