

CARSON[®]

MagniScope[™]


MA-60



Congratulations on selecting your new MagniScope! In order to achieve optimum performance, please follow instructions for proper use and care.

FOR USE AS A MONOCULAR:

1. Monocular portion should be detached from acrylic base (loupe) portion.
2. Look through the eyecup (eyeglass wearers can fold/roll down the eyecup to increase field of view).
3. Turn focus wheel until object you are viewing is sharp and clear.

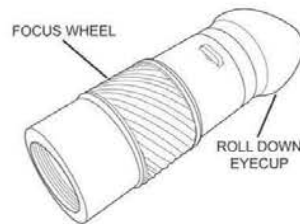

FOR USE AS A LOUPE:

1. Loupe portion should be detached from the monocular.
2. Turn on LED light by pressing the red button on the side of the battery compartment.
3. Place acrylic base directly on the viewing surface.
4. Hold your eye directly above the loupe as close to the lens surface as possible.
5. Focus using the focus wheel above the acrylic base stand.



FOR USE AS A MICROSCOPE:

1. Twist and thread together the monocular and acrylic base (loupe) portions.
2. Turn on LED light by pressing the red button on the side of the battery compartment.
3. Focus using the focus wheel located on the monocular portion of the item.



REPLACING THE BATTERIES:

1. Twist of battery cap located on the battery compartment side opposite of the red button.
2. Remove spent batteries and replace with 3 fresh LR44 button cell batteries.
3. Place into battery compartment with positive side up and replace cover.



WARNING:

Viewing the sun can cause permanent eye damage. Do not view the sun with this item or the naked eye. Do not place the LED lighted base directly on your eye as this may cause damage as well.

Customer Service: If you experience any difficulties please contact us and we will be happy to help you.



✉ info@carson.com



✉ uksupport@carson.com



✉ eusupport@carson.com

For warranty information, visit www.carson.com/warrant

www.carson.com

Carson Optical 2070 5th Avenue, Ronkonkoma, NY 11779 | Tel: 631-963-5000