

CARSON[®]

20x Microscope

With Universal Smartphone Clip

MM-380




Congratulations on selecting your new 20x Microscope with Universal Smartphone Clip! In order to achieve optimum performance, please follow instructions for proper use and care.

PRODUCT SPECIFICATION:

Magnification:	20x
Dimensions:	1.0" x 2.7" x 3.2"
Illumination:	LED and UV Light
Batteries:	3 G12 batteries (included)

USING THE MICROSCOPE:


1. Place microscope directly on subject and turn focus wheel until image is clear.

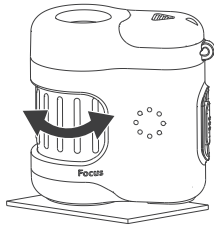


2. Slide switch:

- DOWN to activate the microscope LED
- UP to use the flashlight function
- Center to turn OFF

Flashlight - ON
OFF
Microscope LED - ON

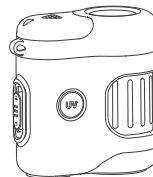


3. Press and hold UV button to use UV Light.

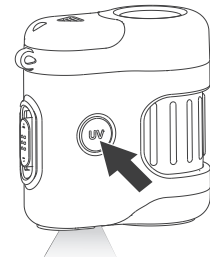

ATTACHING CLIP TO PHONE:


Place clip on phone making sure camera* is centered inside circle on the underside of clip.

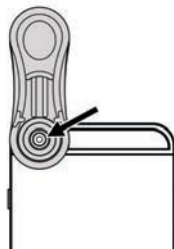

*For help with dual camera phones, visit www.carson.com/multicam

ATTACHING MICROSCOPE TO CLIP:

Align microscope with clip as shown. It will be magnetically held in place.

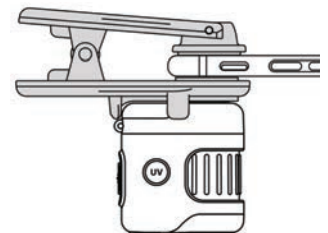


FOCUSING SCREEN IMAGE:

Auto focus: Tap the screen in your camera app.


Manual focus: Turn the focus wheel on the microscope until the image is clear.

REPLACING BATTERIES:

1. Use a screwdriver to remove screw. Then slide door open.

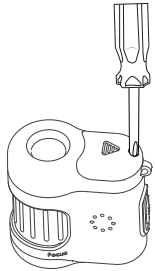

2. Insert 3 new G12 batteries, replace door and tighten screw.

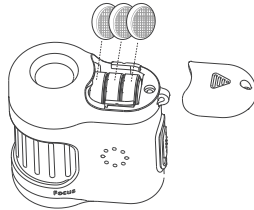

WARNING:

1. To avoid eye damage:

- Do not look at the sun through this microscope.
- Do not place lighted microscope directly upon human eye.

2. Remove batteries before storing microscope for an extended period.

Customer Service:

If you experience any difficulties, please contact us and we will be happy to help you.



✉ info@carson.com



✉ uksupport@carson.com



✉ eusupport@carson.com

For warranty information, visit www.carson.com/warrant

www.carson.com

Carson Optical 2070 5th Avenue, Ronkonkoma, NY 11779 | Tel: 631-963-5000