

FREESTAND™


2.5x LED Lighted Magnifier

INSTRUCTIONS FOR USE





www.carson.com/mt55guide

English / Français / Español / Deutsch / 日本語

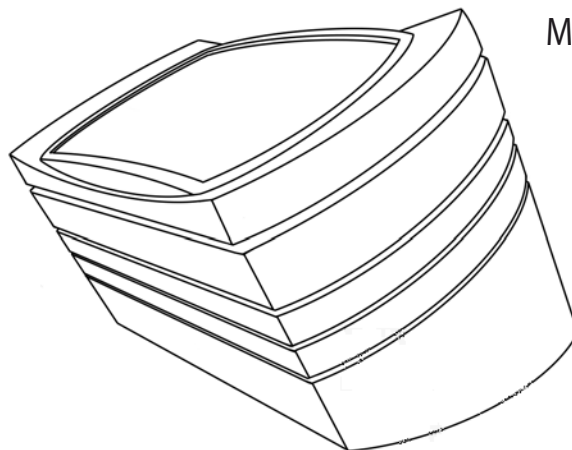


Using your magnifier:

1. Before initial use, remove tab from battery compartment located inside magnifier base.
2. Remove protective covering from lens.
3. Slide the ON/OFF switch located inside the magnifier base to the "ON" position.
4. Once the switch is in the "ON" position you may turn the LED lights on and off by pressing down on the top of the magnifier. To avoid accidental scratching and fingerprints, always press on the frame around the lens instead of the lens surface.
5. Place base of magnifier directly on viewing surface to magnify subject 2.5x.
6. Return switch to "OFF" position when not in use.

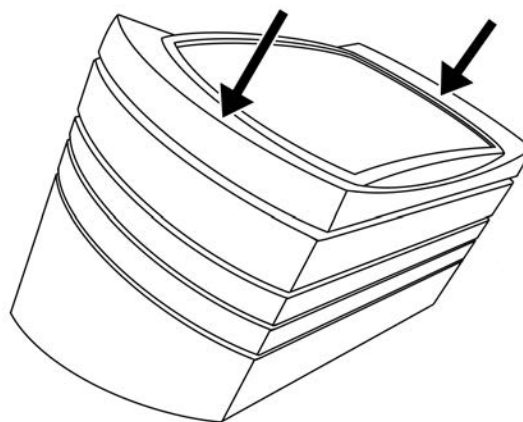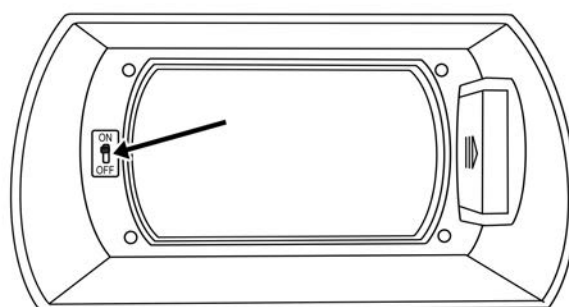

Replacing the batteries:

1. Slide battery door up and fold outward.
2. Remove spent batteries and replace with two fresh CR2016 button cell batteries.
3. Batteries should be replaced with positive side facing outward. Replace battery door when finished.

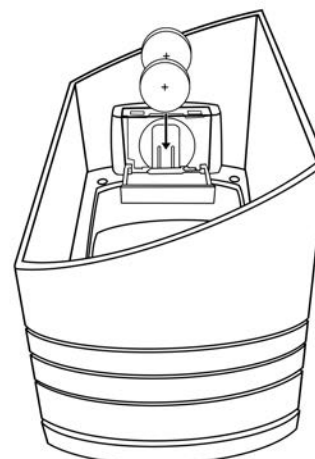

IMPORTANT: CLEAN USING MICROFIBER LENS CLOTH. DO NOT USE ANY ABRASIVES, CHEMICAL CLEANERS OR SOLVENTS.